

Kitchen, Appliances, and Wardrobes Station Walk Newbridge Kildare



Station Walk Newbridge Kitchen Spec All Types

Kitchen Door	Colour	Carcass	Counter Top	Sink	Тар	Handle
Shaker painted	Wimborne White And Studio green	Cambrian Oak/Grey Bardolino Oak	Solid Surface 20mm Ice Crystal with Upstand	Hafele Under Mounted 1.5 bowl (567.48.110)	Lever Tap 566.90.232	S/S Knob H50 And SS Cup handles EV005



Station Walk Newbridge Robes Spec All Types

Robe Door	Colour	Carcass	Handles
Slab Doors	Egger Natural Grey (U708ST9)	To match the Doors Natural Grey (U708ST9)	T Bar Handles T23



Station Walk Newbridge Appliances for All Types

Oven and Hob	Fridge Freezer	Dishwasher	Microwave	Extractor
Bosch built-in oven set HBF1PKE6E2 [Bosch Single Oven HBF113BR0B Bosch	Bosch Integrated Fridge Freezer 70/30 KIV38X22GB	Bosch Integrated Dishwasher SMV40C00GB	Bosch Integrated Microwave BFL523MS0B	Hafele Canopy Hood, CP Hi- Spec Motor 500.30.092
Electric 4 ring hob 60 cm PKE611B17E]				

note: appliance codes may vary





Product details

CLIP top BLUMOTION standard hinge 110°, overlay application, boss: screw-on



Part number	71B3550
Item number	08884623
Colour / finish	Nickel plated
Packaging quantity	250
Weight per 1,000 Pcs in kg	73.82
EAN code	9002617767988
UPC code	

Kitchen – Clip top standard hinge 110*

Product details

CLIP standard hinge 100°, overlay application, boss: screw-on

Wardrobes – Clip standard hinge 100*



Part number	71M2550
Item number	03281399
Colour / finish	Nickel plated
Packaging quantity	250
Weight per 1,000 Pcs in kg	64.45
EAN code	9009494423419
UPC code	

FITZGERALD KITCHENS





Blum clip on adjustment 0mm plate



Quality mounting plates are essential for trouble free doors and cupboards. These nickel plates are compatible with all Blum clip top hinges. Available in two options for cabinet sides 15mm and 18mm. If you ever need to adjust your mounting plate, you normal y must slacken the screws holding it to the cabinet which over time can mean they don't hold as well. The integral cam screw feature means the height adjustment is actioned here instead and prolongs the longevity of the fix.

Select the option relevant to the thickness of the cabinet side where the plate is to be attached to allow for correct door spacing.

Attributes:

Mounting plate: 173H7100 & 173H7130

· Mounting plate system: CLIP

· Shape of mounting plate: Cruciform

· Material: Steel

· Finish: Nickel plated

· Height adjustment: +/- 2mm via cam screw



Blumotion clip on for 100-120* hinges



Technical Details

Part Number	973A0500
Item Weight	36.3 g
Manufacturer reference	973A0500
Finish	Nickel
Shape	Rectangular
Item Package Quantity	6

FITZGERALD KITCHENS







Alto Drawer Set 164mm high 552.63.554

Alto Drawer Set 86mm high 552.66.554

Article details



Finish	Silver
164mm High	
Load bearing capacity	35
Drawer length - 450	0 mm
Version	Version: Full extension, with integrated soft-close Adjustment: Front: 2 dimensional, also tilt for drawer front adjustment with railing system Includes: Drawer sides, runners, screw-on front fixing brackets, back panel brackets, gallery rails and cover caps
Mounting	Front fix brackets snap into drawer sides with screw-fix mounting onto the drawer front Adjustment horizontally ± 1 mm Adjustment vertically ± 2 mm

Article details	
Load bearing capacity	35
86mm High	
Finish	Silver
Version	Version: Full extension, with integrated soft-close Adjustment: Front: 2 dimensional, also tilt for drawer front adjustment with railing system Includes: Drawer sides, runners, screw-on front fixing
Mounting	brackets, back panel brackets and cover caps
Mounting	Front fix brackets snap into drawer sides with screw-fix mounting onto the drawer front Adjustment horizontally ± 1 mm Adjustment vertically ± 2 mm



built-in oven set HBF113BR0B + PKE611B17E

HBF1PKE6E2

Components

Additional information

Manuals and Documents



Serie | 2 built-in oven 60 x 60 cm Stainless steel HBF113BR0B



Serie | 4 electric hob 60 cm Black PKE611B17E The glass-ceramic radiant hob: makes cooking and cleaning especially easy.

- TouchSelect: Selection of the desired cooking zone and easy setting of the desired power level.
- Timer with switch-off function: Turns off the assigned cooking zone after the set time.
- The handy ChildLock locks the control panel to prevent accidental changes in settings.
- Ceramics glass is much more slim and durable with better vertical conduction.

The built-in oven with 3D hot air: achieve perfect baking and roasting results on up to three levels simultaneously.

Red LED display control: easy-to-use thanks to clear time display.



• Appliance Bosch Single Oven

Image	VIB / device designation	Brief description	Price / EAN code
	Serie 2 Built-in oven, Stainless steel HBF113BR0B	The built-in oven with 3D hot air: achieve perfect baking and roasting results on up to three levels simultaneously. • 3D Hotair: perfect results thanks to optimal distribution of heat on up to 3 levels simultaneously. • Red LED display control: easy-to-use thanks to clear time display.	
	Unit is part of set HBF1PKE6E2		
© возси	ENERG © DISTRICTION OF THE PROPERTY OF THE PRO		



Appliance Bosch Electric hob



Serie | 4 PKE611B17E

Unit is part of set HBF1PKE6E2

Dual rings, tough and easy-to-clean glass surfaces and good Electric hob, 60 cm, looks make ceramic hobs a smart addition to your home.

- TouchSelect: Selection of the desired cooking zone and easy setting of the desired power level.
- Timer with switch-off function: Turns off the assigned cooking zone after the set time.
- The handy ChildLock locks the control panel to prevent accidental changes in settings.



Appliance Bosch Integrated Microwave

Serie | 4, built-in microwave, 60 x 38 cm BFL523MS0B



The built-in microwave for the 38 cm niche: use it for thawing, heating and perfect preparation of foods.

- AutoPilot 7: every dish is a perfect success thanks to 7 pre-set automatic programmes.
- Red LED display control: easy-to-use thanks to clear time display.
- · Pop-out controls: for an easy to clean front.


Technical Data

Type of micro-wave oven : MW only Type of control: Electronic Color / Material Front : Stainless steel Dimensions: 382 x 594 x 317 201.0 x 308.0 x 282.0 Cavity dimensions (mm): Length electrical supply cord (cm): 130 15.558 Net weight (kg): Gross weight (kg): 17.6 EAN code : 4242005038862 Maximum micro-wave power (W): 800 1270 Connection Rating (W): Current (A): 10 Voltage (V): 230-240 Frequency (Hz): 50 Plug type : GB plug





Appliance Bosch Integrated Fridge Freezer

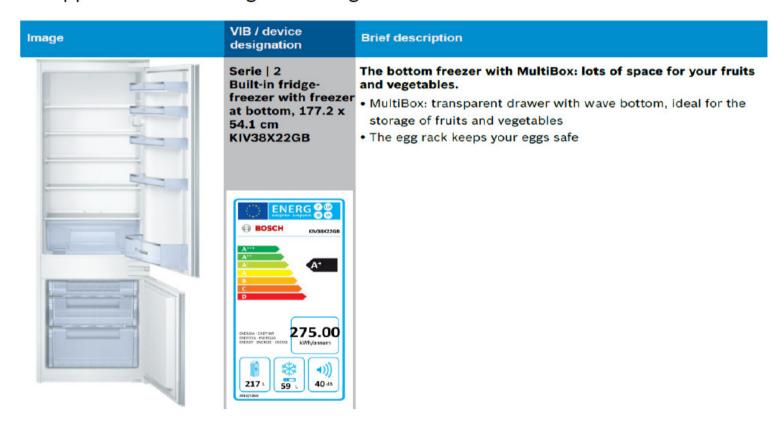



Appliance Bosch Integrated Dishwasher



Serie | 2 Fully-integrated dishwasher, 60 cm SMV40C00GB



The ActiveWater 60 with AquaStop: Offers you 100% protection against water damage for the life of the appliance - guaranteed.

- InfoLight: a red infolight on the floor indicates whether the dishwasher is switched on or off.
- AquaStop: 100% lifetime warranty for water damages guaranteed.
- Glass protection: for gentle care of your glasses and delicate dishes.
- · EcoSilence Drive: Energy efficient, quiet running motor.
- 10-year guarantee: our convincing promise of quality against rusting of the inner tub.



Canopy Hood Hafele 500.30.092



Aftersales Support

01 287 3488


info@hafele.ie

Monday - Thursday

8.45am - 5.30pm

Friday

8.45am - 5.00pm

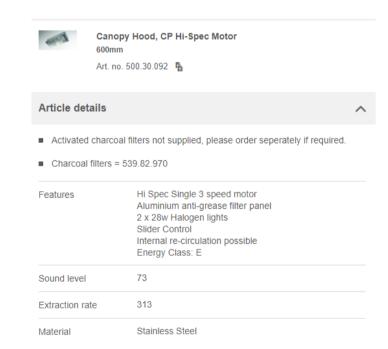





Mixer Tap, Single Lever Monobloc Mixer, Häfele Easton Polished chrome




Features	WRAS approved Quarter turn ceramic disc valve Spout ext reach: 260 mm Spout ext height: 180 mm 0.3 bar min, operating pressure 0.5 bar max, operating pressure
Mounting	1 tap hole required
Version	Single lever monobloc
Height	145 mm
Material	Brass
Finish Polished chrome	



Sink, Undermount, 1.5 Bowl, Häfele Calder Reversible –, Main bowl size 345 x 410 mm, half bowl size 165 x 300 mm



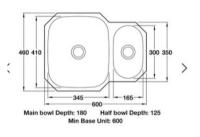

Technical Support 01 2873488

E-mail: technicalsupport@hafele.ie

Opening hours:

Monday to Thursday, 8.45am to 5.30pm

Friday 8.45am to 5.00pm



Worktop: Ice Crystal Solid Surface Acrylic Man-Made Composite



- Solid-surface countertops are a man-made composite of different materials, including a polymer resins or acrylic and stone.
- Solid surface countertops are resistant to heat, however can still can warp, crack, or discolour with direct exposure to heat, especially over a prolonged period. Always place hot pots and pans, slow cookers etc on a raised chopping board or trivet to avoid damage occurring.
- Don't use paint removers, oven cleaners, or other strong chemicals on the countertops.
- Always use a cutting board. Do not cut directly on the countertop.
- To prevent a soap film or residue, make sure to dry the surface thoroughly after cleaning. Residue streaks can leave behind what looks like light scratches, but you can get rid of them by using a damp cloth with mild abrasive cleaner and rubbing it in small circles onto the surface. Wipe dry.
- Should the material become scratched or broken, a solid surface can, in most cases, be repaired quickly by a certified solid surface repair company or trained fabricator.

FITZGERALD KITCHENS



CABINETRY WARRANTY INFORMATION

Fitzgerald Kitchens offer as standard a one year defects and damage warranty on all new Kitchen and Wardrobe cabinetry and fitting components fitted on development sites.

Warranty is valid for one calendar year from date of purchase of property. This warranty applies to any Kitchen/Wardrobe component but does not apply to damages caused by the following:

- 1. Accidents or misuse
- 2. Damage from heat/steam
- 3. Breakage not due to a defect in the material or fitting
- 4. Improper care and maintenance

The company will repair or replace, at its discretion, any fitted component found to contain a manufacturing or fitting defect and is within the period of the warranty.

All repairs must be specifically authorized before being undertaken.

CARE GUIDE FOR PAINTED AND LAMINATE CABINETRY COMPONENTS

- ALL carcasses are made from 18mm MDF with 100gr melamine bonded on to it with 2mm PVC. Edging to front face
- · Painted doors are Shaker MDF hand painted, or finish spray painted
- Laminate doors are Slab doors made from MFC bonded onto it with 2mm PVC edging
- · The hinges are "Blum" and drawers are "Alto"

CLEANING PROCEDURE

- · The cabinet interiors can be cleaned with an abrasive cleaner like Cif or similar
- · Doors should only be cleaned with washing up liquid and warm water
- · Both interior and exterior should be wiped dry immediately after cleaning
- · Use a clean, microfiber cloth for regular dusting
- Clean your hardware with a solution of warm water and mild dish detergent applied to a damp microfiber cloth (brass and silver cleaners are not recommended)
- · Dry your hardware and surrounding area immediately

MAINTENANCE AND USE

- · Do not over-fill cabinet shelves and drawers with heavy loads
- Avoid door mounted storage accessories unless the cabinet has been specifically designed for this feature



APPLIANCES AND HEAT/STEAM DAMAGE

- · Heat and steam can damage many components of a kitchen.
- · When cooking always turn on the vent on your range hood or extractor fan.
- · Avoid opening dishwasher during or too soon after a cycle
- Avoid placing hot items or electric appliances directly on the countertop, use protective insulating, trivets, chopping boards etc.
- When using heat and/or steam producing appliances such as toasters, crock pots, kettles or coffee makers always pull them out toward the edge of the countertop so they are not directly below the upper cabinets - this will help prevent damage to cabinets' finish, edging, and doors

SUNLIGHT EXPOSURE

 Consider the use of blinds or shades to prevent discolouration of your cabinetry. Exposure to direct sunlight tends to darken the color of natural wood products.
 Sunlight can also fade painted surfaces, laminated surfaces and Thermofoil surfaces.

WATER DAMAGE

- Quickly cleaning spills and splatter prevents damage caused by prolonged exposure. Prolonged exposure to spills, including food, water or other liquids can cause permanent discolouration or damage.
- Avoid draping damp or wet dish towels over the doors of cabinets. Over time, this
 moisture can cause permanent water damage to the door.
- Extra attention is required around susceptible areas such as sinks, drainers, dishwashers, waste cans and food preparation areas.





SOLID SURFACE COUNTERTOP WARRANTY INFORMATION

Fitzgerald Kitchens offer, as standard, a one year defects and damage warranty on all new Solid Surface countertops fitted on development sites. Warranty is valid for one calendar year from date of purchase of property. Never kneel, sit or stand on your countertop as this may cause cracking and will void the warranty.

This warranty applies to any Solid Surface countertop but does not apply to damages caused by the following:

- 1. Accidents or misuse
- 2. Damage from heat
- 3. Breakage not due to a defect in the material or fitting
- 4. Improper care and maintenance

The company will repair or replace, at its discretion, any fitted countertop found to contain a manufacturing or fitting defect and is within the period of the warranty.

All repairs must be specifically authorized before being undertaken.

CARE GUIDE FOR SOLID SURFACE

Your Solid Surface Composite Countertop is a man-made material composed from acrylic resin. This material is more resistant to surface damage than other materials but like most things, better care will make for a longer life. Worktops are buffed to achieve an aesthetically pleasing matte finish with no need for sealing.

CLEANING

Worktops are non-porous and can be wiped down with commonly used household cleaning liquids, or specially formulated cleaners for "Solid Surface Composites" can also be used.

For most staining a simple soap and water solution on a cloth or sponge will suffice, for trickier stains a stronger cleansing agent may be required. Soak the stained area in an abrasive cleaner for about 10 minutes. Thereafter, use a cloth or a sponge to rub the area in a circular motion carefully and then rinse thoroughly. Do not expose the surface to harsh chemicals, if contact occurs flush countertop with water. Never use steel wool on your countertop.

To prevent a soap film or residue, make sure to dry the surface thoroughly after cleaning. Residue streaks can leave behind what looks like light scratches. To remove hard water deposits, use a wet cloth with a mixture of one part vinegar to three parts water. Dry the area with a clean dry cloth.



MINOR DAMAGE

A scratch that can be felt by touch should be addressed by a professional fabricator. To avoid scratching, always use a cutting board instead of cutting directly on the surface. Use felt pads on canisters, pottery, etc. to prevent scratching on the surface.

HEAT TOLERANCE

Always use a hot pad or trivet with rubber feet to protect surface from heat. Hot pans and heat producing appliances may cause discolouration or cracking which will void the warranty.

CARE

Scratches and small chips from sharp utensils may occur over time through general use but can easily be removed by a professional fabricator by sanding with sanding sponge for fine scratches, and sandpaper for deeper scratches and small chips.

Should the material become cracked or broken, a solid surface can, in most cases, be repaired quickly by a certified solid surface repair company or trained fabricator.





LAMINATE COUNTERTOP WARRANTY

Fitzgerald Kitchens offer, as standard, a one year defects and damage warranty on all new Laminate countertops fitted on development sites. Warranty is valid for one calendar year from date of purchase of property.

Plastic laminate countertops are a durable man-made surface, but like any product they can be damaged by misuse. Never kneel, sit or stand on your countertop as this may cause cracking and will void the warranty.

This warranty applies to any Laminate countertop but does not apply to damages caused by the following:

- 1. Accidents or misuse
- 2. Damage from heat
- 3. Breakage not due to a defect in the material or fitting
- 4. Improper care and maintenance

The company will repair or replace, at its discretion, any fitted countertop found to contain a manufacturing or fitting defect and is within the period of the warranty.

All repairs must be specifically authorized before being undertaken.

Mitre joints in laminate countertops require silicone sealing once a year to maintain their water resistance. This is the responsibility of the homeowner.

CARE GUIDE FOR LAMINATE

Clean your countertop with a damp cloth or sponge and a mild detergent. Don't use cleaners containing ammonia, bleach, or abrasives. Wipe the countertop with clean, damp cloth and dry the surface with a non-abrasive cloth. Abrasive cleaners and products such as steel wool should never come in contact with the laminate.

STAIN REMOVAL

Difficult stains can be removed using a mild household cleaner and a soft bristle brush. Rinse thoroughly and dry to remove any residue. Never use cleaners containing acid, alkali or sodium hypochlorite. Hair, textile and food dyes can cause permanent stains. Wipe up immediately and rinse several times with water. Do not use abrasive cleaners, powders, steel wool, sand paper or scouring pads on the laminate surface.



MINOR DAMAGE

Ceramic and abrasive objects can cause scratches and premature wear. Do not chop, slice, pound, or hammer on the laminate surface. Sharp utensils will scratch or slice the surface. Heavy blows may crack or gouge the surface. Use cutting boards, chopping blocks or other protective elements when working on the countertop.

HEAT TOLERANCE

Do not place hot items directly on the laminate surface, use protective insulated pads. Extreme heat can cause cracking, blistering, burns, and discoloration – these are irreparable. Avoid using electric heat sources such as kettles, skillets, and irons directly on the laminate surface.

WATER DAMAGE

Wipe up standing water immediately. Water that is allowed to sit on the countertop for any length of time, especially near mitre joints, can penetrate and cause the core of the counter top to swell and delaminate. Be careful in areas where sinks, dishwashers, coffee makers, toasters or kettles are located on or near a mitre joint. Wipe off water or other liquids immediately. Damage caused by excessive water in the seam area is not warrantied.



Bosch Service



My Bosch appliance is under warranty

- If your appliance has a manufacturing or material fault and it is under the Bosch Two Year Manufacturer's Warranty or the Bosch Extended Warranty, your repair will be free of charge, subject to our warranty terms and conditions.
- Any repair carried out by a Bosch engineer is covered by a 12 month warranty on the engineer's labour and any replacement spare parts that are fitted.
- To book a repair for a Bosch appliance that is under warranty, please call 01450 2655.



Aftersales Support

01 287 3488

info@hafele.ie

Monday - Thursday

8.45am - 5.30pm

Friday

8.45am - 5.00pm



Bosch Warranty Registration

Two Year Manufacturer's Warranty

Register Your Appliance

Two Year Manufacturer's Warranty

Additional Warranties



All Bosch appliances have a two year manufacturer's warranty as standard to protect against any manufacturing and material faults and defects during this warranty period. For further information about this warranty, please click the link below to view the warranty terms and conditions.

To register your appliance online for its two year manufacturer's warranty, please create a MyBosch account, or log in to your MyBosch account if you already have one. Alternatively you can register your appliance over the telephone by calling 01450 2655.

Warranty terms and conditions >